


ASSEMBLY OF THE PLOW, DISC HARROW, AND CULTIVATORS

1. PLOW

- A. Refer to figure 3. Remove the pieces shown from the carton. Also remove (5) 3/8-16 x 1 1/4 plow bolts, (5) 3/8-16 hex head nuts, (1) 1/2 x 2 carriage bolt, (1) 1/2 x 2 1/2 plow bolt, (2) 1/2 lockwasher and (2) 1/2-13 hex head nuts from the plastic hardware bag.

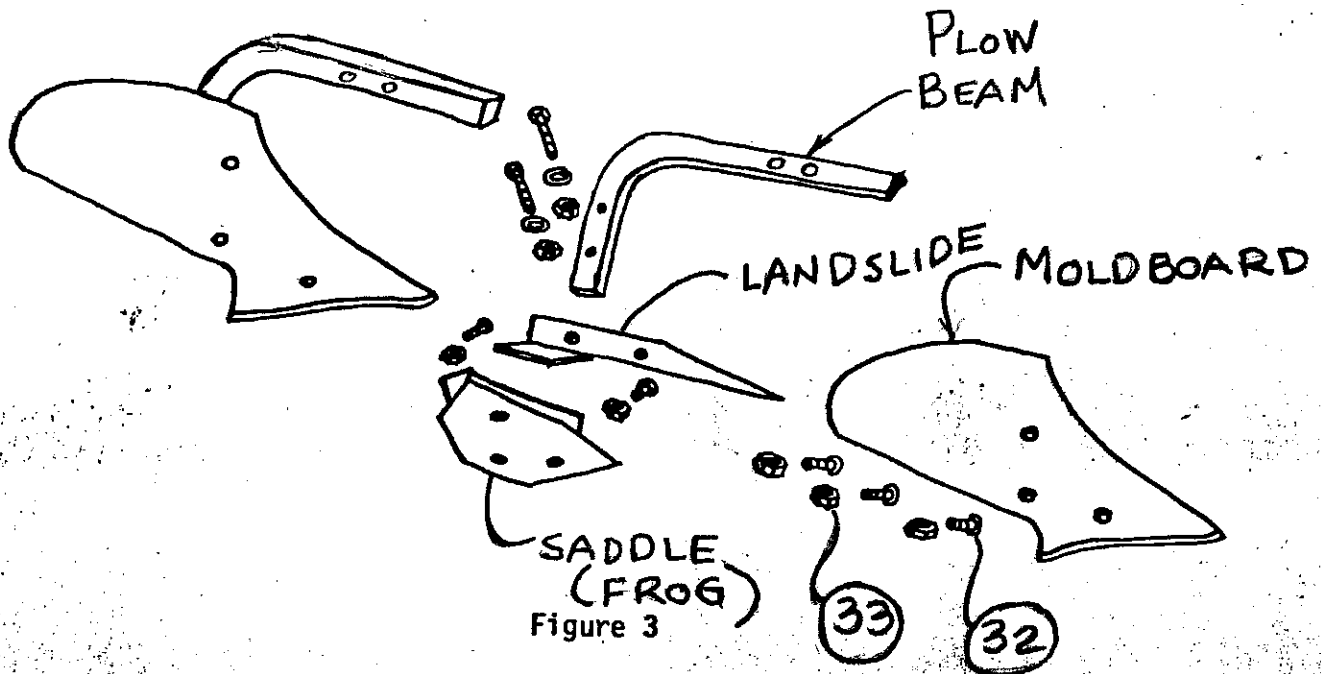

- B. Attach landslide to frog using (2) 3/8 x 1 1/4 plow bolts and (2) 3/8-16 hex nuts.
- C. Attach moldboard to frog using (3) 3/8 x 1 1/4 plow bolts and nuts. Tighten all nuts securely.
- D. Attach plow beam to plow head using (1) 1/2 x 2 1/2 plow bolt, (1) 1/2 x 2 carriage bolt, (2) 1/2 lockwashers, and (2) 1/2-13 hex nuts.