

2. DISC HARROW

- A. Remove the (2) $3/4$ x 20 gang bolts, (4) $3/4$ -10 hex nuts, and (16) $3/4$ flatwashers from plastic hardware bag.
- B. Remove the disc spacers, figure 4, from the cloth bags.

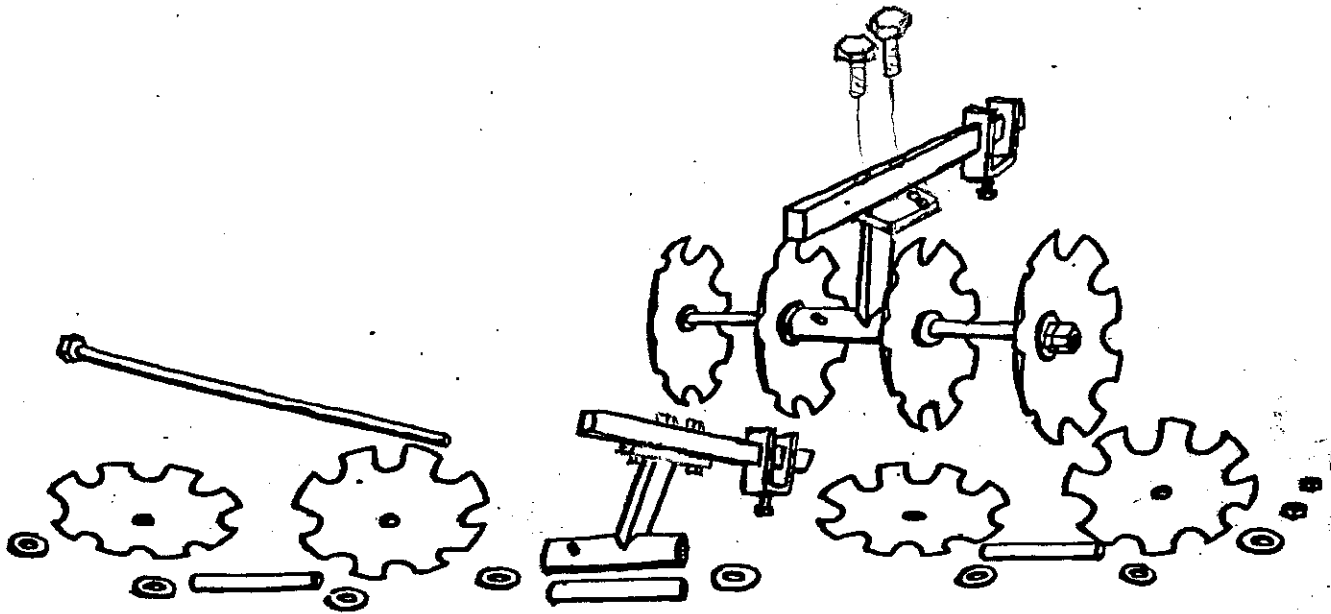


Figure 4

- C. Hold gang bolt in upright position. Install parts as follows:
(1) $3/4$ flatwasher (1) disc blade (1) flatwasher (1) painted spacer
(1) flatwasher (1) disc blade (1) flatwasher (1) unpainted spacer.
Assemble second bolt in the same manner. See Figure 5.