

3. CULTIVATORS - FIGURE 6

- A. Remove (2) offset shanks, (2) straight shanks, (2) large sweeps, and (2) small sweeps from carton.
- B. Install large sweeps on offset shanks, small sweeps on straight shanks, using (8) 7/16 x 2 1/2 plow bolts, and (8) 7/16-14 hex nuts. From the plastic hardware bag.
- C. When using the furrow opener, simply remove large sweep from offset shank and replace with furrow opener.

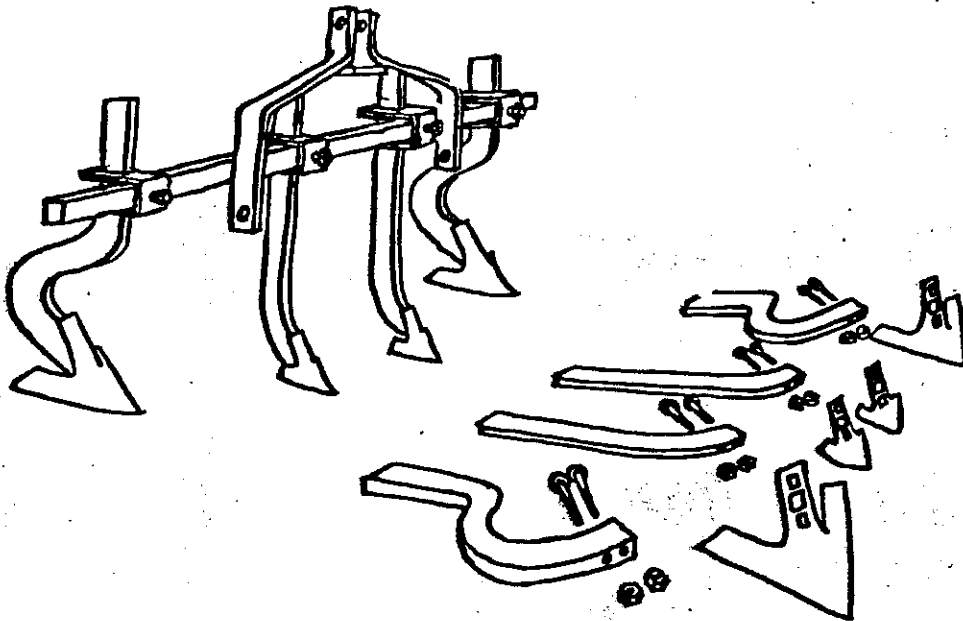


Figure 6